



# SOHO WALL MOUNTED RACK CABINET INSTALLATION DIAGRAM

## STEP 1

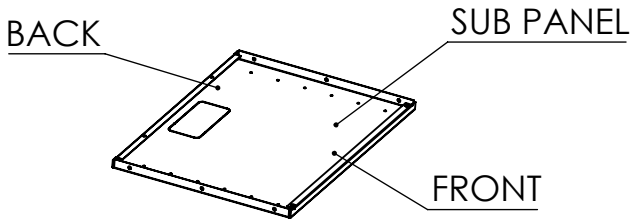


PLACE THE BOTTOM PANEL ON A FLAT FLOOR

## STEP 2

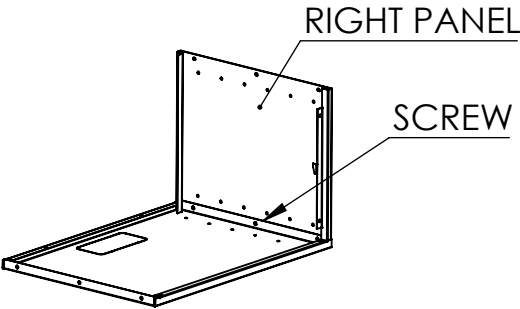


REPLACE RIGHT PANEL AND FIX IT WITH SCREW

## STEP 3

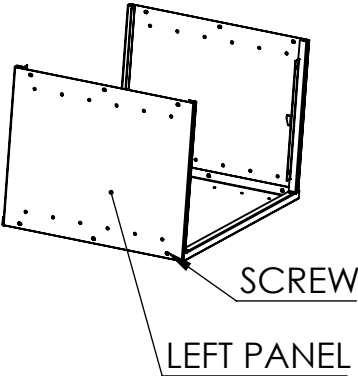


REPLACE LEFT PANEL AND FIX IT WITH SCREW

## STEP 4

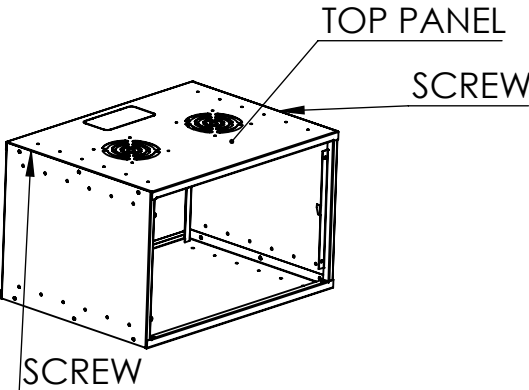

REPLACE THE TOP PANEL AND FIX IT WITH THE SCREW

STEP 5

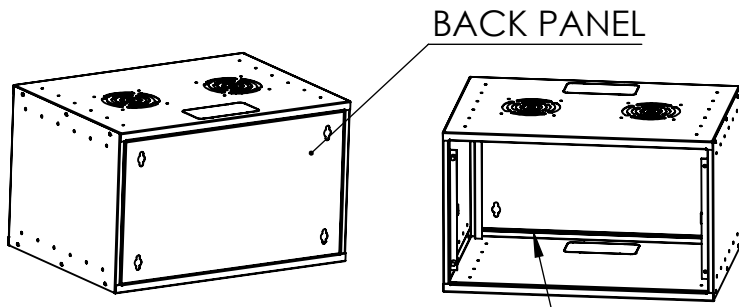


BACK PANEL

SCREW AT 4 OPPORTUNITIES

SCREW 4 POINTS FROM INSIDE

STEP 6

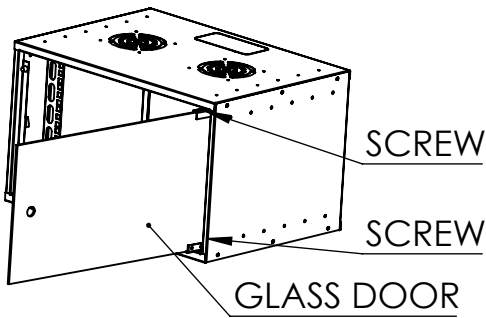


SCREW

SCREW



GLASS DOOR

PLACE THE GLASS DOOR IN PLACE AND SCREW

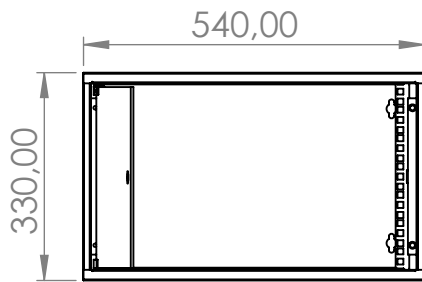

540,00

330,00

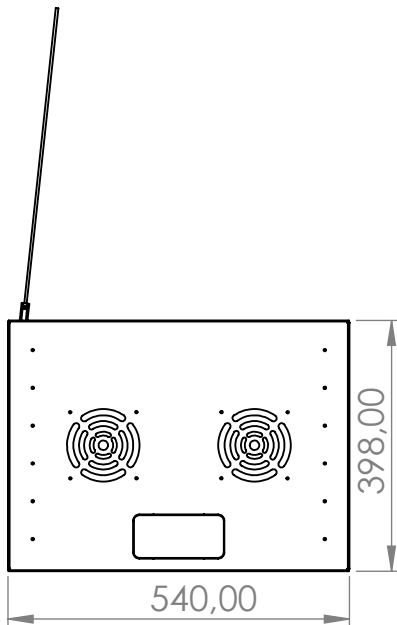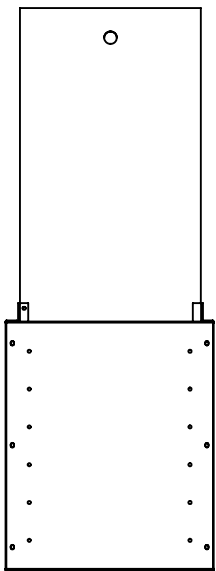

398,00

540,00

